





# BESTHYBRID BATTERIES

## 2008 - 2013 Chevrolet Tahoe, GMC Yukon, Cadillac Escalade

Step-by-Step Hybrid Battery Removal and Installation Instructions

Video demonstration is available at our website: [www.BestHybridBatteries.com](http://www.BestHybridBatteries.com)

**These instructions are provided only as a guide and it is your responsibility to use the proper techniques and safety measures. Best Hybrid Batteries assumes no responsibility for any damage to person or property from the misuse of our products or from failure to use the proper techniques and safety measures. Do not attempt this work if you are not qualified and competent. Use these instructions at your own risk.**

| Tool                                      | Description                                                           | Photo                                                                                |
|-------------------------------------------|-----------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| <b>You will need the following tools:</b> |                                                                       |                                                                                      |
| <b>10mm Socket</b>                        | <b>Disconnect the negative post on the 12V battery under the hood</b> |  |
| <b>Hands</b>                              | <b>Fold the second row seats forward</b>                              |  |

**Trim Tool**

**Pop off the left and right trim pieces**



**Remove the piece covering the hybrid battery**




**Remove the orange main disconnect plug on the passenger side of the hybrid battery. Pull up and fold outward.**




**Remove the four 10mm bolts securing the black cover on the passenger side of the hybrid battery.**



**Remove the two 10mm bolts securing the HV leads to the battery, and the one 10mm grounding bolt.**

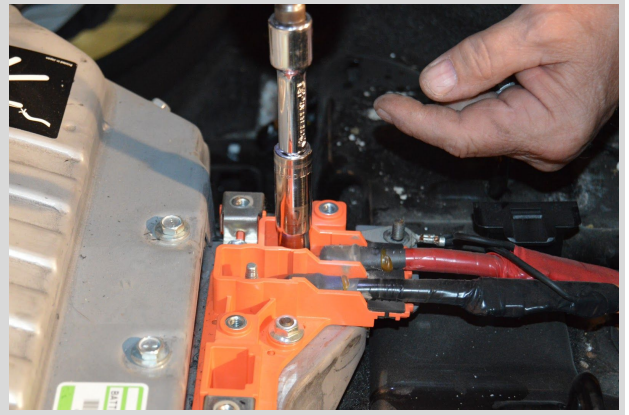

**Pull out the vent hose**

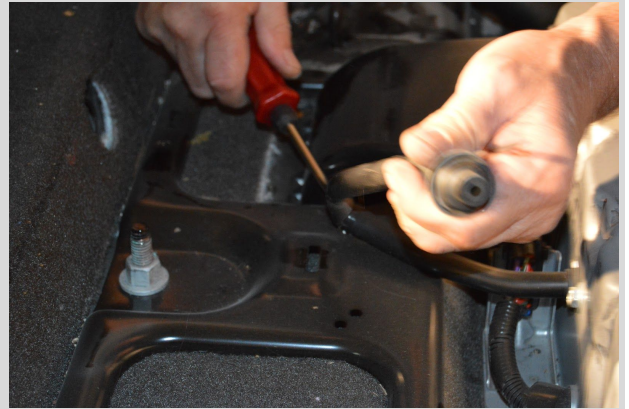

**Remove duct for the cooling fan.**



**Disconnect black wire harness by pulling upwards and folding back.**






**Pry the gray connector off the metal post.**



**Remove one 13mm bolt and two 13mm nuts on the back side of the battery.**

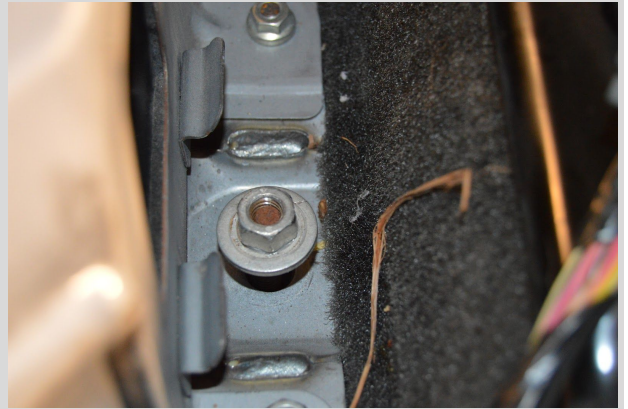

**Remove two 18mm nuts on the front side of the battery.**



**Pick up the battery with one person on each end and remove from vehicle.**



**Follow these same steps in reverse to install the replacement battery from Best Hybrid Batteries**

